


# Switcher Product Basics

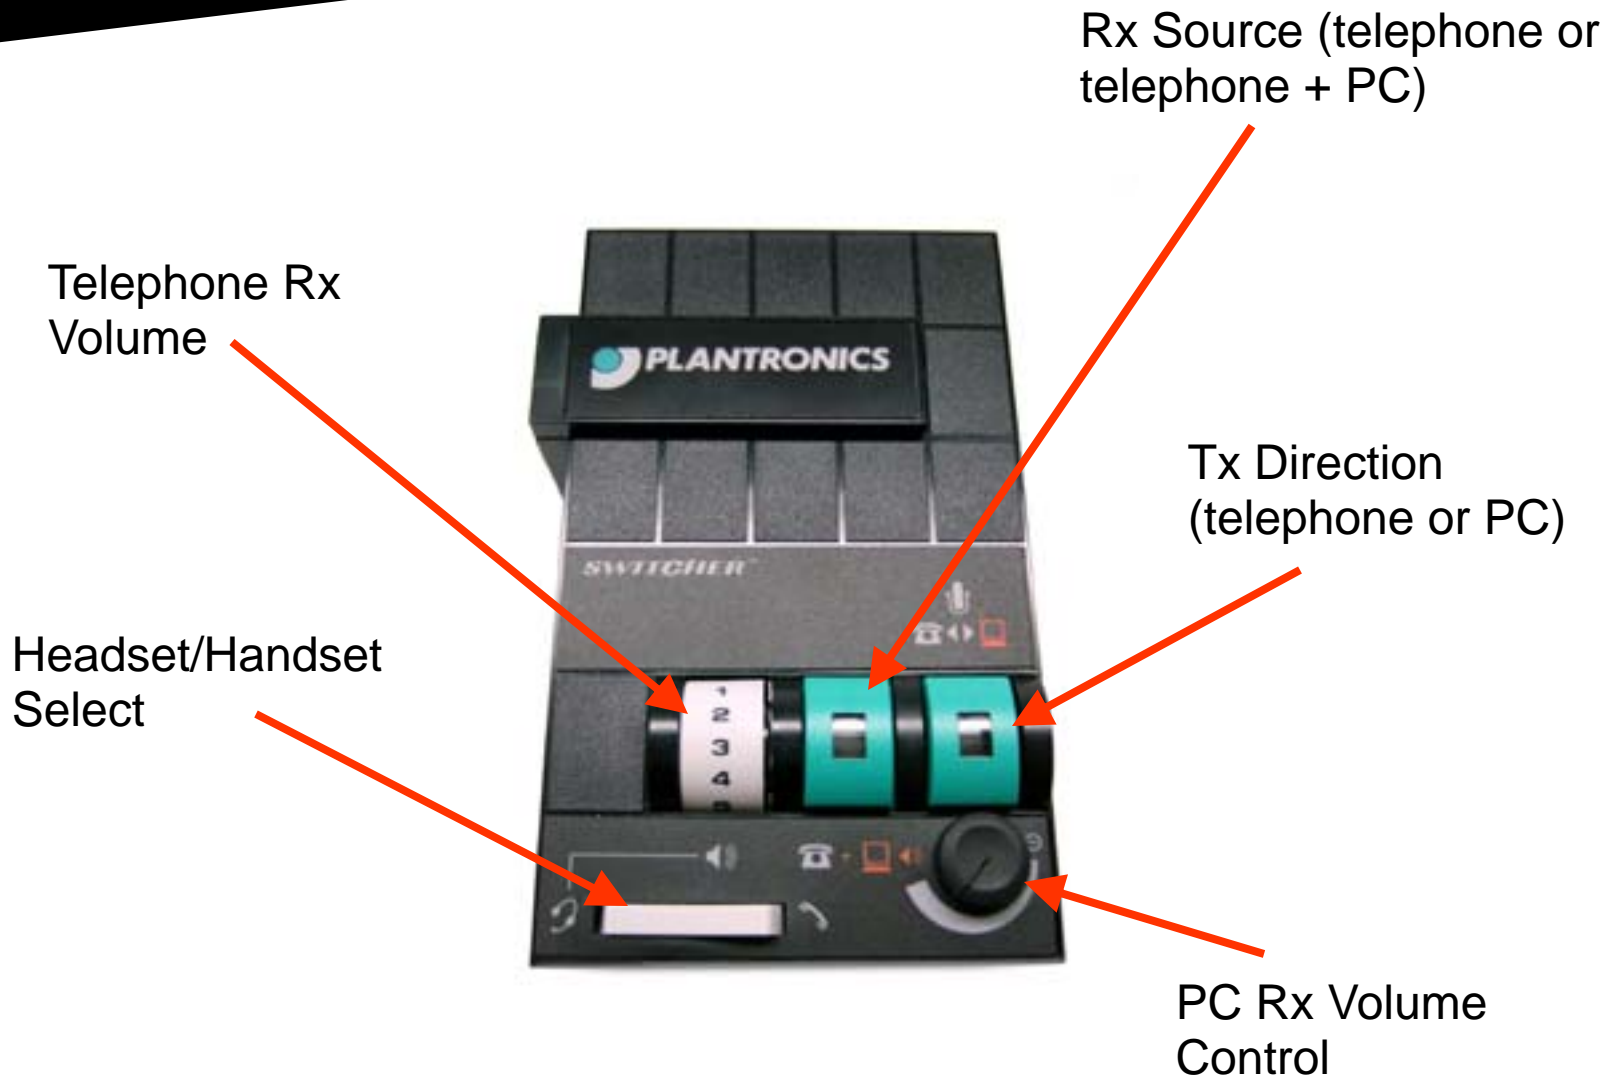

# Mode 1: Telephony Only



- Both switches in “up” position
- Listening to telephone
- Talking to telephone
- Operating as an M10

# Mode 2: Listening to PC



- Left switch depressed, right switch up
- Listening to telephone and PC
- Talking to telephone
- User is listening to music or other content (web, LAN)

# Mode 3: Speech Recognition



- Right switch depressed, left switch up
- Listening to telephone
- Talking to PC
- Allows user to hear the caller while using speech recognition

# Mode 4: Computer Telephony



- Both switches depressed
- Listening to telephone and PC
- Talking to PC
- Computer or IP telephony, or speech recognition with audio cues

# Mode 5: Music-on-Hold



- Left switch depressed, right switch depressed
- Audio device or PC must be configured to play music
- Caller:
  - Hears music
  - Does not hear Switcher user
- Switcher User:
  - Hears caller
  - Hears music



# Mode 6: Recording Calls



- Left switch depressed, right switch up
- Recording device or software must be configured to record calls
- No perceptible difference to caller or user
- Please inform yourself
- Of legal requirements